

Deep Fryer Accessory Set

Using your Accessories

16oz. Stainless Steel Batter Dispenser

Your batter dispenser is the perfect accessory for frying dough, or making doughnuts. Simply fill up to 16 ounces of batter and squeeze the handle to dispense the desired amount of batter.

Stainless Steel Skimmer

Your stainless steel skimmer is perfect for removing fried foods from your deep fryer while allowing grease to drain away.

Locking Tongs

These brushed stainless steel tongs have soft, non-slip handles allowing for a firm, comfortable grip. To lock the tongs for storage simply squeeze them together in the closed position and push the locking tab located at the end of the handle in, to release, simply pull out.

Care & Cleaning

Wash all accessories in warm soapy water and dry thoroughly. We do not recommend cleaning these accessories in your dishwasher.

LIMITED 1 YEAR WARRANTY

Your Wolfgang Puck Deep Fryer Accessory Set warranted to be free of defects in material and workmanship under normal household use for 1 year from date of purchase. This warranty excludes damage caused by accident, misuse, abuse, alteration, or lack of proper care. This warranty gives you specific legal rights and you may also have other rights to which you are entitled which may vary from state to state